



MotionCam

Users Manual

Version 1.0

Release 1.0

March 2006



MotionCam User Manual

Copyright 2006, by AWS Convergence Technologies, Inc.
All Rights Reserved.

Manual Copyright, 2006, by AWS Convergence Technologies, Inc.

All Rights Reserved.

Information in this document is subject to change without notice and does not represent a commitment on the part of AWS Convergence Technologies, Inc. Inc. The software described in this document is furnished under a license agreement or non-disclosure agreement. The software may be used or copied only in accordance with the terms of this agreement. It is against the law to copy AWS Convergence Technologies, Inc. WeatherBug Camera software on magnetic tape, disk or any other medium for any purpose other than the purchaser's personal use.

AWS Convergence Technologies, Inc. and WeatherBug Camera are registered trademarks of AWS Convergence Technologies, Inc. Inc.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy, and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Technical Support

For technical support relating to the WeatherBug products, call the WeatherBug Weather Station Technical Support team at (800) 624-4205.



MotionCam User Manual

Table of Contents

INTRODUCTION	4
SECTION 1: WEATHERBUG MOTIONCAM VIEWER PAGE	4
Frame Rate	
View Size	
Camera Control Panel	
Capture Image	
Weatherbug Achieve	
Broadcaster Image Display	
SECTION 2: MOTIONCAM ADMIN.....	14
SECTION 3: MAINTENANCE	23

LIST OF FIGURES

FIGURE 1 - MotionCam.....	4
FIGURE 2 - MotionCam Computer	4
FIGURE 3 – WeatherBug MotionCam Viewer page	5
FIGURE 4 – Frame Rate	6
FIGURE 5 – View Size 640 X 480	7
FIGURE 6 – View Size 320 X 240	8
FIGURE 7 – View Size 160 X 120	8
FIGURE 8 – Control Panel.....	9
FIGURE 9 – Zoom bar	10
FIGURE 10 – Before zoom	11
FIGURE 11 – After zoom	11
FIGURE 12 – Captured Image.....	12
FIGURE 13 – WeatherBug Achieve’s Homepage.....	13
FIGURE 14 – MotionCam Admin page	14
FIGURE 15 – Camera Setting.....	15
FIGURE 16 – System Setting	16
FIGURE 17 – User Setting.....	18
FIGURE 18 – Preset Positions.....	19
FIGURE 19 –Tour Settings	21
FIGURE 20 – Schedule Settings.....	22



MotionCam User Manual

Introduction

Congratulations on choosing the Weatherbug MotionCam! The MotionCam tool has been programmed to help simplify the usability for the camera operator. The camera operates 24 hours a day, 7 days a week at the site and provides images to the internet every 5 minutes. The MotionCam is capable of physically rotating to provide different views, zooming in and out to detailed objects, schedule image tours and many more. This user's manual will help show you how to operate the camera by describing the Weatherbug MotionCam Viewer page.

Your MotionCam purchase comes with a preset computer with all the necessary applications installed to operate the camera. The MotionCam Viewer page is the tool needed to control and operate the MotionCam. This page is already set as your default home page when you open your Internet Explorer browser. Figure 1 & 2 shows a figure of the MotionCam and the MotionCam computer.



FIGURE 1 - MotionCam



FIGURE 2 - MotionCam Computer

SECTION 1: WeatherBug MotionCam Viewer page

Open an Internet Explorer web browser page on your computer and it should default to displaying the MotionCam Viewer Page. Please DO NOT change the default setting on the web browser. If the default homepage has been changed on the MotionCam computer, you can reach the MotionCam Viewer page by typing in its IP address, <http://192.168.213.188>. This address will ONLY work from the MotionCam computer (or computer directly connected to the camera).



If you want access to the MotionCam from another computer, type in the MotionCam computer's IP address. This IP address will vary. You can contact your network administrator and they can provide you with the correct IP address to the MotionCam computer.



MotionCam User Manual

Verify that the picture on the computer monitor is functioning and in focus. View the Weatherbug MotionCam Viewer page on the monitor. Figure 3 shows the window display and the following links:

1. **Frame Rate** – The rate at which the camera transfers the live feed to the screen.
2. **View Size** – This selection allows the viewer to adjust the size of the image on the screen.
3. **Camera Control Panel** – This panel allow the user to control the direction and zoom of where the camera is facing.
4. **Capture Image** – Takes a snapshot of the camera.
5. **Weatherbug Achieve** – Opens Weatherbug Achieve's homepage in a new window.
6. **Broadcaster On-Air Display** – Opens a new window with the picture that is shown on the TV stations.
7. **SECTION 2: MotionCam Admin** – Opens a new window with administrative options for the MotionCam found in Section 2.

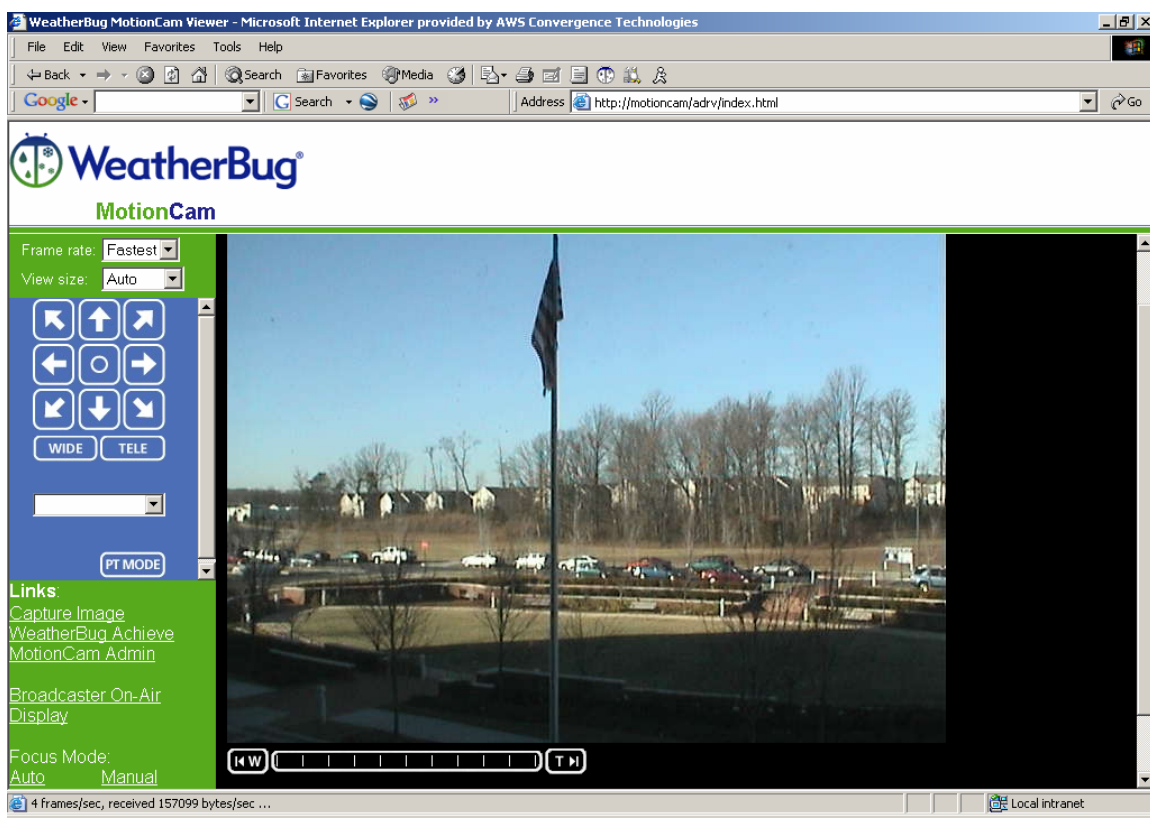 


FIGURE 3 – WeatherBug MotionCam Viewer page



MotionCam User Manual

Frame Rate

The Frame Rate is the rate at which the camera transfers the live feed to the screen. Selecting the pull down menu beside Frame Rate gives the following options shown in Figure 4. The higher the rate is, the more resources the MotionCam Viewer page will use from your computer and your network. Ask your network administrator how high you should set your frame rate.

FPS = Frames per Second

1. *Fastest*
2. *25 FPS*
3. *20 FPS*
4. *15 FPS*
5. *10 FPS*
6. *8 FPS*
7. *6 FPS*
8. *4 FPS*
9. *3 FPS*
10. *2 FPS*
11. *1 FPS*

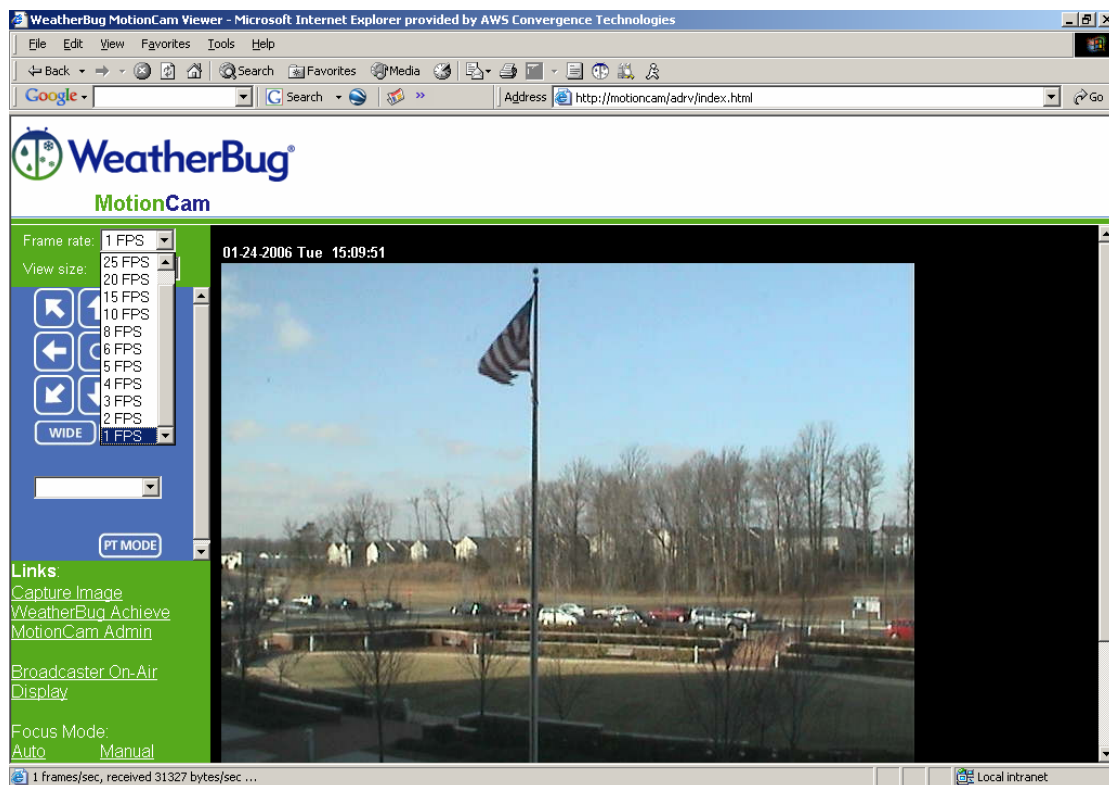 


FIGURE 4 – Frame Rate



MotionCam User Manual

View Size

This option allows the viewer to adjust the size of the image on the screen. Selecting the pull down menu option beside View Size gives the following options.

1. *Auto* (Figure 5)
2. *640 X 480* (Figure 5)
3. *320 X 240* (Figure 6)
4. *160 X 120* (Figure 7)

The view size affects how much virtual memory your computer is using and the bigger the image size, the more memory it is using from your computer. Unless there is an issue with memory usage on your computer, it is suggested that you select *Auto* to see the best possible image.

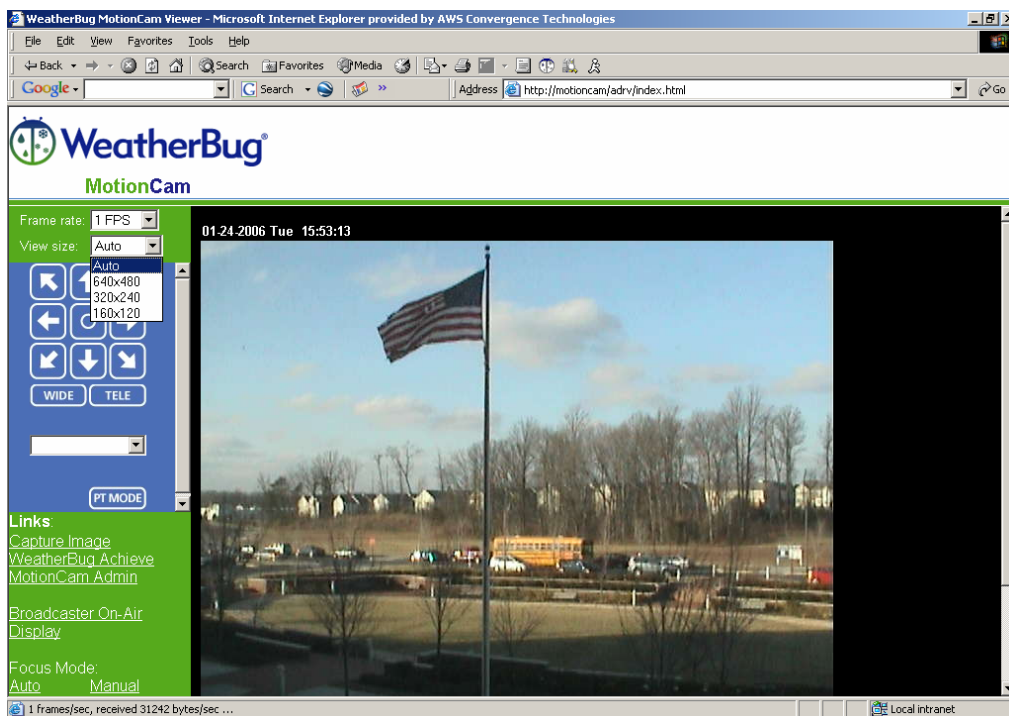 


FIGURE 5 – View Size 640 X 480



MotionCam User Manual

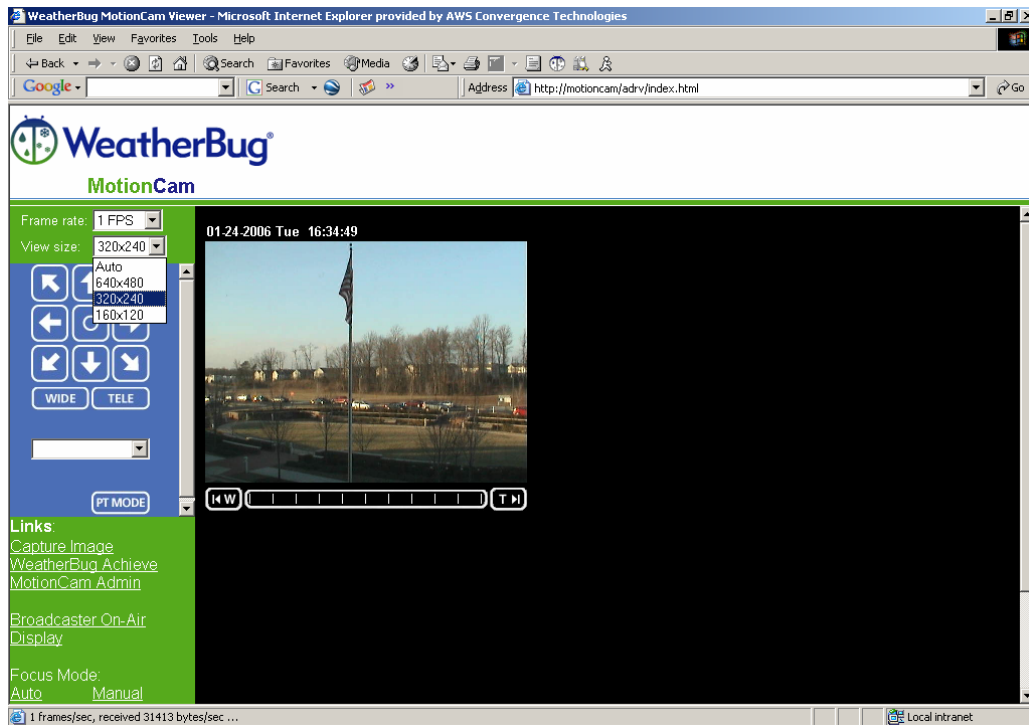 


FIGURE 6 – View Size 320 X 240

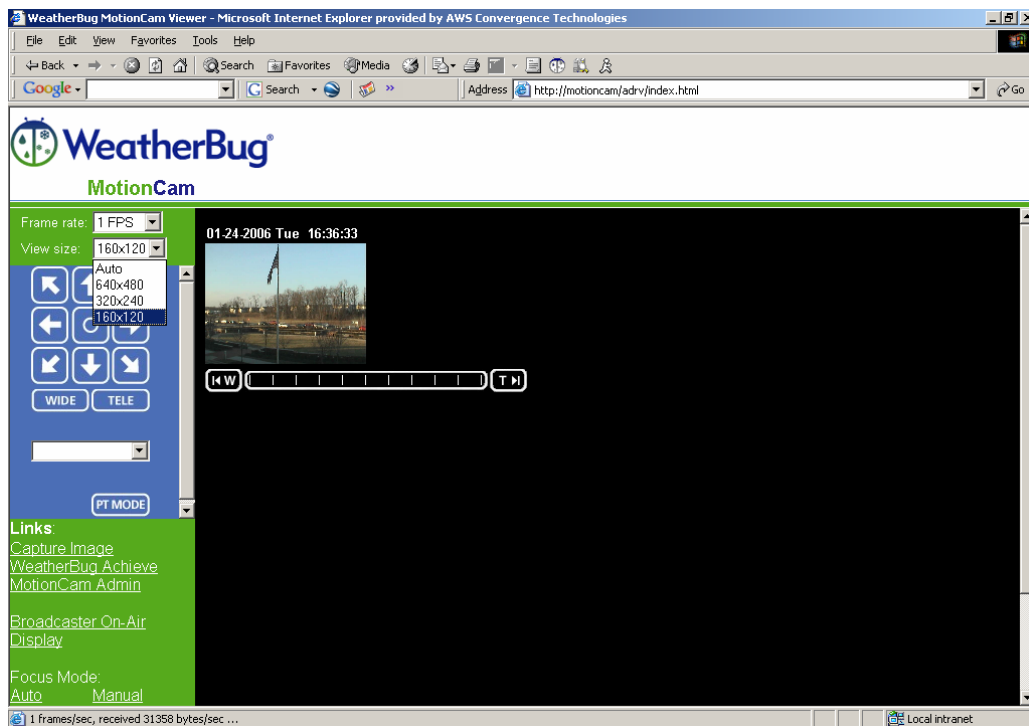 


FIGURE 7 – View Size 160 X 120



MotionCam User Manual

Camera Control Panel

The controls in this blue panel will alter the direction or zoom of your picture by moving your MotionCam within its clear plastic dome.

- Using the **Arrows** you should be able to move the lens of the camera from its current position to the specified direction.
- The **drop-down menu** allows you to point to a preset position. Details on page 18.
- **WIDE** allows you to zoom out.
- **TELE** allows you to zoom in.
- **PT MODE** allows you to move the camera relative to the center of the picture



FIGURE 8 – Control Panel



MotionCam User Manual

Other Methods of moving the camera

By using a point, click and drag method, you can control where your camera is facing and zooming into without having to use the control panel. One click at any point on the image will center the camera angle at that point. If you click and drag the picture, a red box will appear. When you release the mouse, your picture will zoom to the size of your box. Figures 10 and 11 shows the before and after effects of this zoom procedure.

You may also use the zoom bar below the image like in Figure 9.

“T” = Tele = Zoom In

“W” = Wide = Zoom Out



FIGURE 9 – Zoom bar



MotionCam User Manual

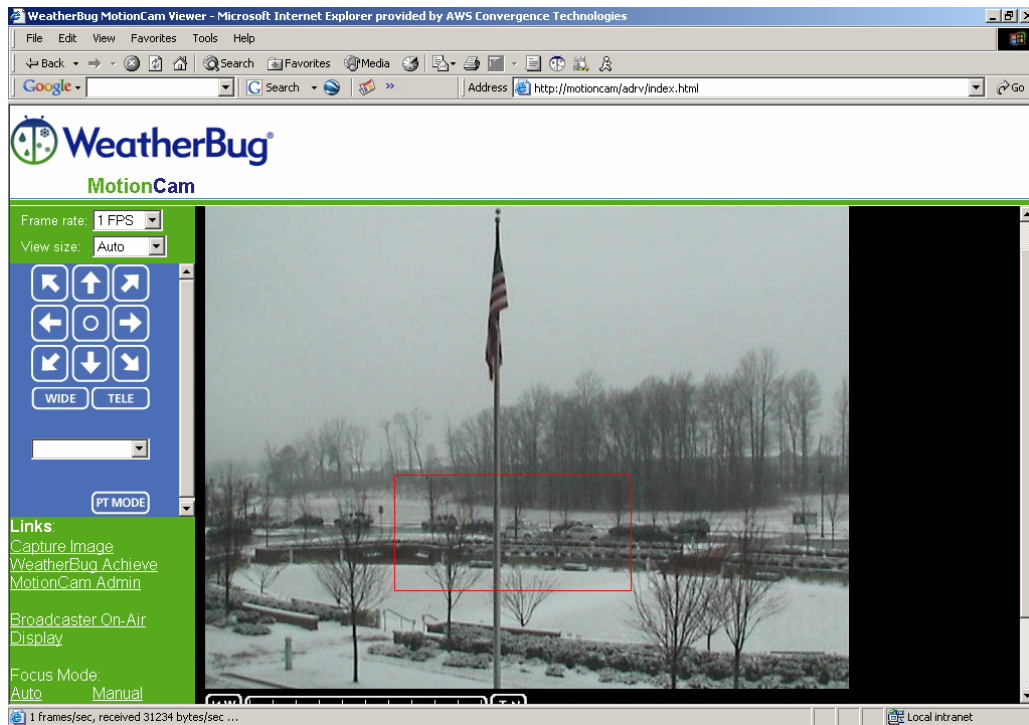 


FIGURE 10 – Before zoom

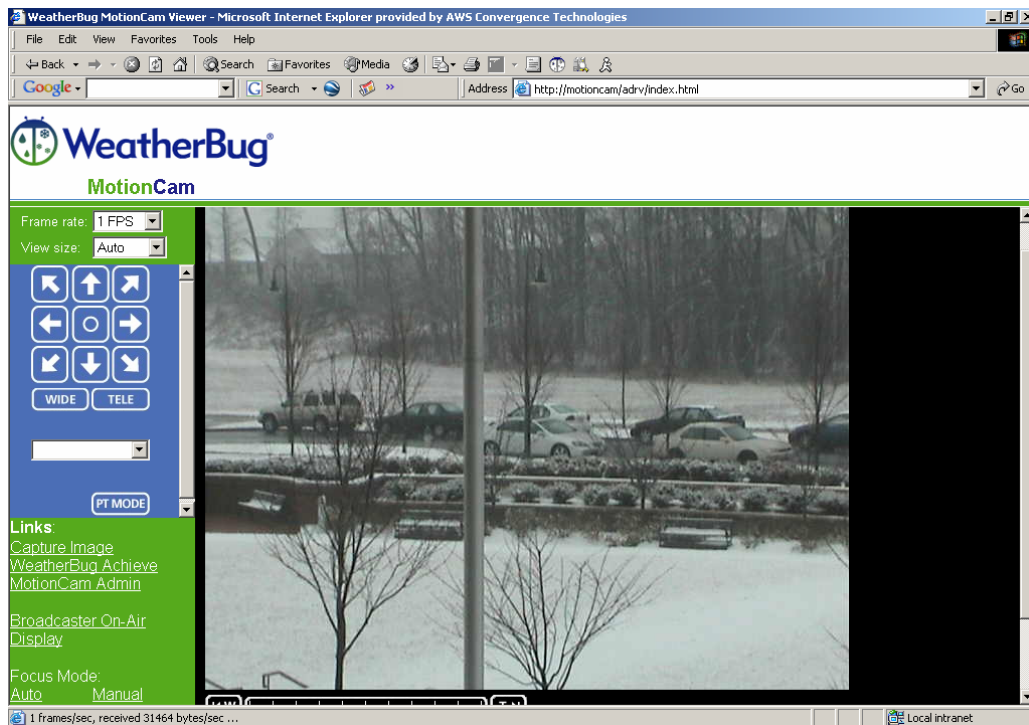 


FIGURE 11 – After zoom



MotionCam User Manual

Capture Image

Clicking on this link will take a snapshot of the current camera position and will open a new window and show the picture as shown in Figure 12. This allows you to save special images to you computer.



FIGURE 12 – Captured Image

Weatherbug Achieve

Clicking on this link will open the homepage of Weatherbug Achieve as shown in Figure 13. You can also reach this page with the following address:

<http://achieve.weatherbug.com/>

WeatherBug planted its roots in the education market in 1992 by installing professional-grade weather stations at schools allowing teachers to apply real-world weather conditions for math, science and geography. All schools were networked together and soon after, WeatherBug introduced a rigorous curriculum that covered grades K-12 meeting national and state education standards.



MotionCam User Manual

Today WeatherBug Achieve's integration of real-life weather conditions with hands-on classroom curriculum is enhancing learning and interaction with students and teachers. Studies have shown students of all ages and backgrounds have benefited both personally and academically from the use of WeatherBug Achieve when incorporated into text book curriculum.

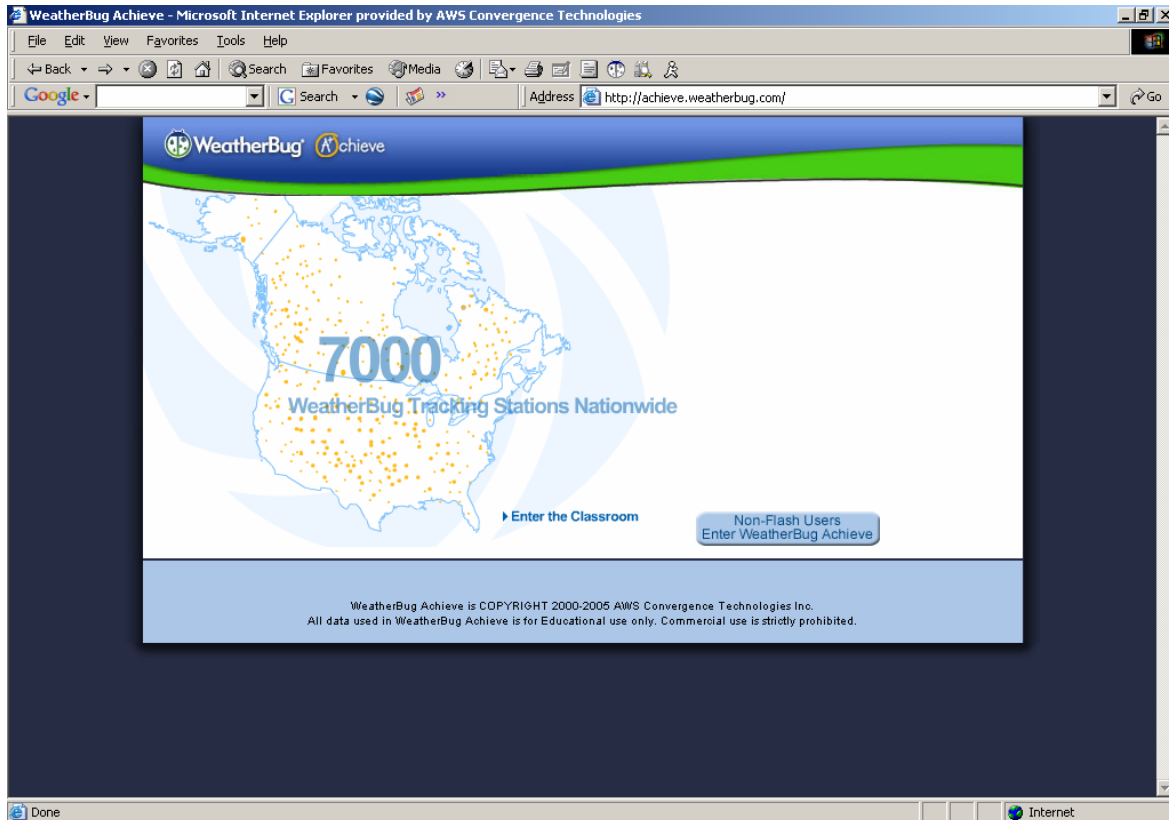 


FIGURE 13 – WeatherBug Achieve's Homepage

Broadcaster On-Air Display

This link opens a new browser window with the live picture that your local TV stations have access to. The TV stations may use this feed to air on their live news broadcast.



MotionCam User Manual

SECTION 2: MotionCam Admin

Clicking on this link opens a new browser page containing more camera options such as Camera and System settings, activity detection, preset positions and more. See Figure 14. The typical camera user will not need to access this section. Most options will require a network login and password depending on your set up preference. The following sections will give you a more in depth view of the administrative page.

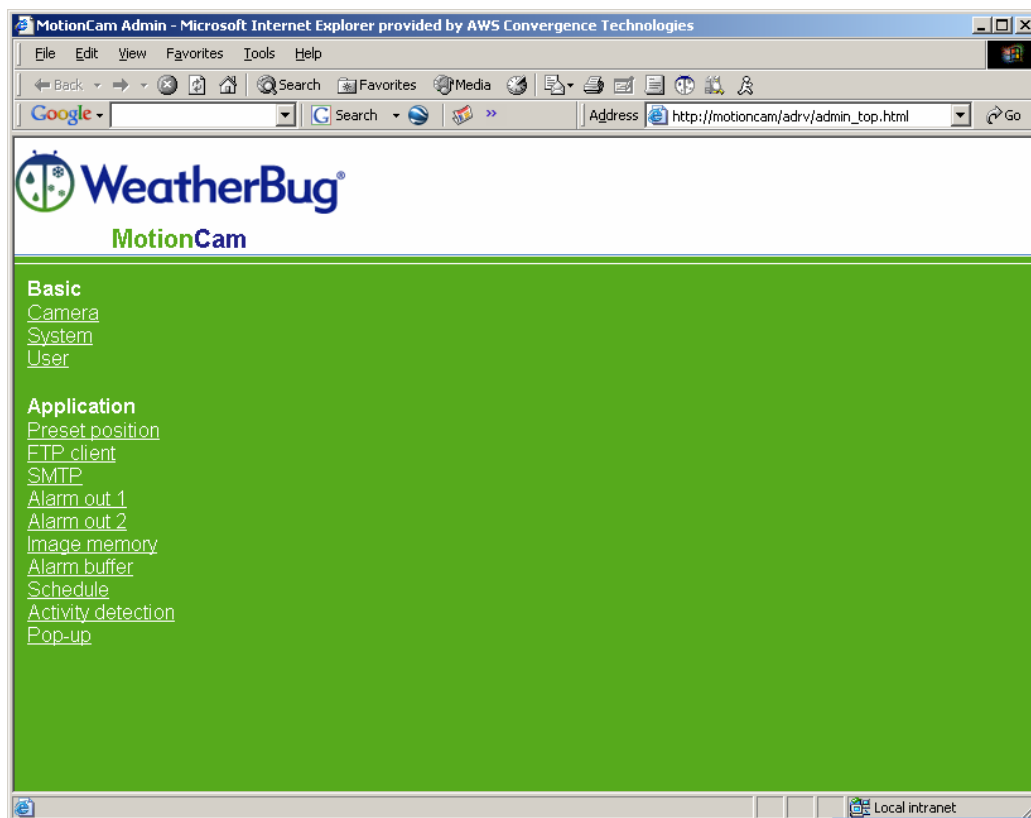 


FIGURE 14 – MotionCam Admin page

Camera

This page contains standard camera settings which will alter the color, quality and sharpness of the image. Your MotionCam has come with default settings which you may change to your preference. When changing an option, click the “Apply” or “OK” button on the same row for the changes to take place. Figure 15 shows the default camera settings.

To prevent shaking images due to windy conditions, turn the Stabilizer “On” and click “Apply.”



MotionCam User Manual

Camera setting	
Image size	Maximum alarm images change by selecting the list box. 640x480(Auto) <input type="button" value="Apply"/>
Image quality	Maximum alarm images change by selecting the list box. Level 5 <input type="button" value="Apply"/>
Image	<input checked="" type="radio"/> Color <input type="radio"/> Monochrome <input type="button" value="Apply"/>
Area setting	<input type="radio"/> On <input checked="" type="radio"/> Off <input type="button" value="Apply"/> <input type="button" value="Area setting"/>
Zoom mode	Full <input type="button" value="Apply"/>
Focus mode	Auto <input type="button" value="Apply"/>
White balance mode	Auto <input type="button" value="Apply"/>
Exposure mode	Full auto <input type="button" value="Apply"/> Back light compensation <input type="radio"/> On <input checked="" type="radio"/> Off <input type="button" value="Apply"/>
Exposure compensation	<input type="radio"/> On <input checked="" type="radio"/> Off <input type="button" value="Apply"/>
Saturation	0 (-3 to 3) <input type="button" value="Apply"/>
Sharpness	6 (1 to 16) <input type="button" value="Apply"/>
Contrast	0 (-3 to 3) <input type="button" value="Apply"/>
Stabilizer	<input type="radio"/> On <input checked="" type="radio"/> Off <input type="button" value="Apply"/>
Camera reset	<input type="button" value="Apply"/>

Day/Night setting	
Day/Night mode	<input type="radio"/> Disable <input checked="" type="radio"/> Auto <input type="radio"/> Manual <input type="radio"/> Timer
<input type="button" value="OK"/> <input type="button" value="Cancel"/>	

Camera control mode setting	
Mode	<input checked="" type="radio"/> Normal <input type="radio"/> Step
<input type="button" value="OK"/> <input type="button" value="Cancel"/>	

FIGURE 15 – Camera Setting



MotionCam User Manual

System

This page contains default settings that are already on your computer system, as shown on Figure 16. The common camera user will not need to access this page and administrators should not have to change the features on this page after the first use.

System setting		
Serial No.	<input type="text" value="116730"/>	
Default frame rate	<input type="text" value="Fastest"/>	
Mount	<input checked="" type="radio"/> Ceiling <input type="radio"/> Desk top	
Exclusive control mode	<input type="radio"/> On <input checked="" type="radio"/> Off	
System log	<input type="button" value="View"/>	
Access log	<input type="button" value="View"/>	
<div><input type="button" value="OK"/> <input type="button" value="Cancel"/></div>		

Date time setting		
Current date time	<input type="text" value="02-22-2006 15:23:15"/>	
System(PC) current date time	<input type="text" value="02-22-2006 15:23:14"/>	<input type="button" value="Apply"/>
Manual current date time (20yy-mm-dd hh:mm:ss)	20 <input type="text" value="02"/> - <input type="text" value="01"/> - <input type="text" value="01"/> <input type="text" value="00"/> : <input type="text" value="00"/> : <input type="text" value="00"/>	<input type="button" value="Apply"/>
Time zone selecting	<input type="text" value="(GMT-05:00) Bogota, Lima, Quito, Eastern Time(US & Canada)"/>	<input type="button" value="Apply"/>
Date time format	<input type="text" value="mm-dd-yyyy hh:mm:ss"/>	<input type="button" value="Apply"/>
Synchronization with NTP server	<div><input checked="" type="radio"/> On <input type="radio"/> Off</div> <div><div>NTP server name<input type="text" value="time.nist.gov"/></div><div>Interval time <input type="text" value="1"/> hours</div></div>	<input type="button" value="Apply"/>

Initialization	
Reboot	<input type="button" value="Reboot"/>

FIGURE 16 – System Setting



MotionCam User Manual

User

This page allows the administrator to password protect the MotionCam program, which will limit the camera users to certain functions. They can set the user names and passwords for the Administrator and up to 9 users and their access level. There are 5 access levels you can grant the user depending on their UserID. As the levels decrease, your access in the MotionCam program gets more limited.

Level 4 – Level 4 gives the highest level of access which gives you access to everything in the MotionCam program. User has full administrative rights. User can view and move the camera and change any administrative settings in the MotionCam Admin page.







Level 3 – User can view and move the camera – Performs user authentication when a user accesses the MotionCam Admin page.

Level 2 – User can only view the camera – Performs user authentication when a user accesses the MotionCam Admin page.

Level 1 – User has no access to the camera. See table below.

No Access Rights – No access rights – Only use this option when you want to temporarily prohibit access to the camera.

Please consult your network administrator about accessing the MotionCam program.

	Administrative Rights & Controls	Control & Move Camera	View Camera
Level 4			
Level 3			
Level 2			
Level 1			

To set up the user, enter the **User name**, **Password**, **Re-type password** and **Access right** for each user ID. See Figure 17.

User name – Type a name between 4 and 16 characters

Password – Type a password between 4 and 16 characters

Re-type password – Confirm the password and sure the characters are the same as the Password



MotionCam User Manual

User setting				
User ID	User name	Password	Re-type password	Access right
Administrator	<input type="text" value="awsadmin"/>	<input type="password" value="*****"/>	<input type="password" value="*****"/>	Level 4
User 1	<input type="text" value="administrator"/>	<input type="password" value="*****"/>	<input type="password" value="*****"/>	Level 4
User 2	<input type="text" value="admin"/>	<input type="password" value="****"/>	<input type="password" value="****"/>	Level 4
User 3	<input type="text"/>	<input type="password"/>	<input type="password"/>	No access right Level 1 Level 2 Level 3 Level 4
User 4	<input type="text"/>	<input type="password"/>	<input type="password"/>	No access right
User 5	<input type="text"/>	<input type="password"/>	<input type="password"/>	No access right
User 6	<input type="text"/>	<input type="password"/>	<input type="password"/>	No access right
User 7	<input type="text"/>	<input type="password"/>	<input type="password"/>	No access right
User 8	<input type="text"/>	<input type="password"/>	<input type="password"/>	No access right
User 9	<input type="text"/>	<input type="password"/>	<input type="password"/>	No access right
User access right: <input type="text" value="Level 3"/>				
<input type="button" value="OK"/> <input type="button" value="Cancel"/>				

FIGURE 17 – User Setting

Preset Positions & Tour

This page allows the administrator to program the preset camera position by storing the pan, tilt and zoom positions of the camera in memory (Preset position) and program the sequenced action of the camera (Tour). You can store up to 16 Preset positions in memory.

How to preset positions:

1. Adjust the pan, tilt and zoom of the camera to the position (view) you want your camera by using the control panel as describe on page 9.
2. Select a preset number 1 to 16 from the **Preset No.** drop down list.
3. Type a **Preset Position name** up to 32 characters.
4. Press the **Apply** button to store the camera position
5. Check on the **Preset position table** if the changes have been made.
6. Go to the MotionCam Viewer page and scroll down the list of the Preset positions to check if the changes have been applied.



MotionCam User Manual

Preset position setting		
Position preset		
Preset No.	1	Preset call
Preset position name	US Flag Outside	
		Apply Clear
Position at alarm		
Sensor1	none	
Sensor2	none	
Sensor3	none	
Activity detection	none	Activity detection
		Apply Cancel
Preset position table		
Preset No.	Name	Position at alarm
No.1	US Flag Outside	
No.2	NetOps	
No.3	Bart	
No.4	Shyam	
No.5	Wx Station/Instacam	
No.6	Another Flag	
No.7	Entrance	
No.8	WxBug Truck @ Corner	
No.9	Test	
No.10		
No.11		
No.12		
No.13		
No.14		
No.15		
No.16		

FIGURE 18 – Preset Positions

How to program the four settings:



MotionCam User Manual

1. Select a **Tour name** from among A, B, C, D and E
2. Type in the **Stay time**, between 1 and 3600 seconds, for the camera to stay at each preset position.
3. Select the **Pan speed** from the drop down list from 1 to 19 and Fastest. The camera pans faster with a higher number setting.
4. Select the **Tilt speed** from the drop down list from 1 to 15 and Fastest. The camera tilts faster with a higher number setting.
5. Select the preset position number 1 to 16 for each of the list boxes. The camera moves to the preset positions stored in the selected preset numbers in the sequence. The sequence of camera movement starts from the upper-left list box to the right, then lower list box from left to right. This sequence is cyclical, after the preset position specified in the last list box, the camera returns to the first preset position.
6. Press **Apply** button to store the tour settings.

How to activate a tour:

1. Select the **Tour name** A to E you want to activate. Select none if you do not want to activate any tour or if you want to stop the tour in action.
2. Select the **Available period** for which you can activate the tour.
 - a. **Always**: The tour can be activated any time.
 - b. **Use scheduler**: The tour is activated according to the **Schedule check** selected on the Schedule No. menu. See page 22.
3. When **Use Scheduler** is selected on the Available period menu, select the schedule you want to activate the tour.
4. Click to select the check box(es) 1 to 6. You can select multiple schedules.
5. Select the tour activity after it has stopped because you have manually operated the camera from the camera control section during the tour in action. If you select **On**, specify the wait time before the tour restarts, between 5 and 600 seconds. The tour restarts automatically after the specified time has elapsed. If you select **Off**, the tour does not restart and **none** is displayed on **Selected tour name**.



MotionCam User Manual

Tour setting									
Tour name	A								
Stay time	5 (1 to 3600sec)								
Pan speed	Fastest								
Tilt speed	1								
Sequence	1	1	end	end	end	end	end	end	end
	end	end	end	end	end	end	end	end	end
<div>Apply</div> <div>Cancel</div>									

Tour table												
Tour	Sequence										Speed	
A	1	1									Stay time	5
											Pan speed	Fastest
											Tilt speed	1
B	7	7									Stay time	5
											Pan speed	Fastest
											Tilt speed	Fastest
C	1	2									Stay time	5
											Pan speed	1
											Tilt speed	1
D	1	2									Stay time	5
											Pan speed	1
											Tilt speed	1
E	1	2									Stay time	5
											Pan speed	1
											Tilt speed	1

Tour selection									
Selected tour name	A								
Available period	<input checked="" type="radio"/> Always <input type="radio"/> Use scheduler								
Schedule No.	<input checked="" type="checkbox"/> 1 <input type="checkbox"/> 2 <input type="checkbox"/> 3 <input type="checkbox"/> 4 <input type="checkbox"/> 5 <input type="checkbox"/> 6 <div>Schedule check</div>								
Resume time on inactivity	<input checked="" type="radio"/> On <input type="radio"/> Off								
	30 (5 to 600sec)								
<div>Apply</div> <div>Cancel</div>									

FIGURE 19 –Tour Settings



MotionCam User Manual

Schedule Setting

This page allows you to set the schedules for your tours or alarms according to the time and days of the week.

1. Enter the **Start time** and **End time** in 24:00 format.
2. Check the boxes of the days of the week that you want selected.
3. When finished, click **OK**.

The screenshot shows a web browser window titled "Schedule setting - Microsoft Internet Explorer provided by AWS Convergence Technologies". The page has a blue header bar with the text "Schedule setting". Below the header is a table with two columns: "Schedule No." and "Time table (00:00 to 24:00)". There are six rows, numbered "No. 1" through "No. 6". Each row contains a "Start time" field (00 H 00 M), an "End time" field (24 H 00 M), and a set of checkboxes for the days of the week: Mon, Tue, Wed, Thu, Fri, Sat, and Sun. In all rows, the checkboxes for Mon, Tue, Wed, Thu, and Fri are checked, while Sat and Sun are unchecked. Below the table are "OK" and "Cancel" buttons. The browser's status bar at the bottom shows "Done" and "Local intranet".

Schedule No.	Time table (00:00 to 24:00)
No. 1	Start time: 00 H 00 M - End time: 24 H 00 M <input checked="" type="checkbox"/> Mon <input checked="" type="checkbox"/> Tue <input checked="" type="checkbox"/> Wed <input checked="" type="checkbox"/> Thu <input checked="" type="checkbox"/> Fri <input type="checkbox"/> Sat <input type="checkbox"/> Sun
No. 2	Start time: 00 H 00 M - End time: 24 H 00 M <input checked="" type="checkbox"/> Mon <input checked="" type="checkbox"/> Tue <input checked="" type="checkbox"/> Wed <input checked="" type="checkbox"/> Thu <input checked="" type="checkbox"/> Fri <input type="checkbox"/> Sat <input type="checkbox"/> Sun
No. 3	Start time: 00 H 00 M - End time: 24 H 00 M <input checked="" type="checkbox"/> Mon <input checked="" type="checkbox"/> Tue <input checked="" type="checkbox"/> Wed <input checked="" type="checkbox"/> Thu <input checked="" type="checkbox"/> Fri <input type="checkbox"/> Sat <input type="checkbox"/> Sun
No. 4	Start time: 00 H 00 M - End time: 24 H 00 M <input checked="" type="checkbox"/> Mon <input checked="" type="checkbox"/> Tue <input checked="" type="checkbox"/> Wed <input checked="" type="checkbox"/> Thu <input checked="" type="checkbox"/> Fri <input type="checkbox"/> Sat <input type="checkbox"/> Sun
No. 5	Start time: 00 H 00 M - End time: 24 H 00 M <input checked="" type="checkbox"/> Mon <input checked="" type="checkbox"/> Tue <input checked="" type="checkbox"/> Wed <input checked="" type="checkbox"/> Thu <input checked="" type="checkbox"/> Fri <input type="checkbox"/> Sat <input type="checkbox"/> Sun
No. 6	Start time: 00 H 00 M - End time: 24 H 00 M <input checked="" type="checkbox"/> Mon <input checked="" type="checkbox"/> Tue <input checked="" type="checkbox"/> Wed <input checked="" type="checkbox"/> Thu <input checked="" type="checkbox"/> Fri <input type="checkbox"/> Sat <input type="checkbox"/> Sun

FIGURE 20 – Schedule Settings

FTP Client

The FTP Client page is used to set up for capturing and sending still images to an FTP server. You can capture a still image at the moment when a trigger occurs by an external sensor input, the built-in activity detection function or a manual trigger button. The captured still image(s) is sent to the FTP server.



MotionCam User Manual

SMTP

The SMTP page is used to set up for the SMTP function that can capture and send a still image attached to an E-mail. The captured still image is sent as an attachment of the E-mail.

SECTION 3: Maintenance

Under normal conditions, very little maintenance is required on the MotionCam System. The majority of maintenance issues can be evaluated and diagnosed remotely. Should a part or cable need replacement, all components are “plug and play”, i.e., the defective component can simply be removed from the system and a new one installed with the quick disconnect cable connectors.

The window on the camera housing will need periodic cleaning as rain and snow will leave ‘spots’ on the window. Use a soft damp cloth to clean the window.

NOTE: Do not use products that contain ammonia, this will damage the glass.